


Quick Installation Guide

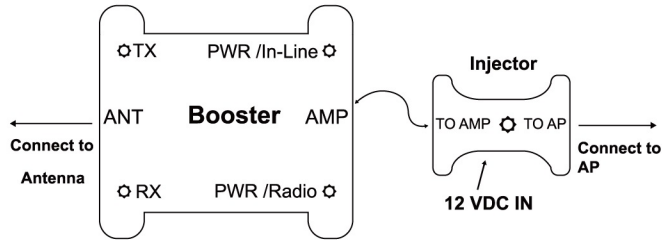

- Rx & PWR / Radio & PWR / In-Line & Injector LEDs will be turned on when Power on
- Tx(RED LED)will flash when system operates well
- Do not disconnect the antenna when the product is power on